

SOLENOID APPLICATION (Cont.)

HP	Beg. S/N	End. S/N	Starter Solenoid	Power Trim Solenoid	Power Trim Relay
6/8/9.9	A197112	OD280999	18-5816	—	—
15	B292414	& UP	18-5816	—	—
18	5837437	& UP	18-5816	—	—
20	4709593	6443972	18-5815	—	—
20	6443973	& UP	18-5816	—	—
25	5705532	G044026	18-5816	—	—
30 JET non-handle	C159200	G589999	18-5818	—	—
35	6445653	C159199	18-5817	18-5817	—
35 (w/ 1 trim ram)	C159200	& UP	18-5817	—	18-5729
40	2874704	5556229	18-5836	—	—
40	5556230	5823917	18-5815	—	—
40	5823918	G053313	18-5817	—	—
40	G053314	& UP	18-5816 ^⑤	—	—
40 4 Cyl. (w/solenoids)	C159200	& UP	18-5816	18-5820	—
40 4 Cyl. (w/relays)	C159200	& UP	18-5816	—	18-5737
45 4 Cyl. (w/o circuit breaker)	5531630	6146848	18-5815	18-5815	—
45 4 Cyl. (w/circuit breaker)	5531630	6146848	18-5815	18-5817	—
45 4 Cyl. (w/o circuit breaker)	6146849	& UP	18-5817	18-5815 ^①	—
45 4 Cyl. (w/circuit breaker)	6146849	& UP	18-5817	18-5817	—
45 4 Cyl.	B110789	& UP	18-5817	18-5817	—
45 JET (w/flush mount solenoid)	D000750	G290584	18-5816	—	—
45 JET	G290585	G589999	18-5820	—	—
50	3008819	4140999	18-5836	—	—
50	4141000	5531629	18-5815	—	—
50 4 Cyl. (w/circuit breaker)	5531630	6146848	18-5815	18-5815 ^①	—
50 4 Cyl. (w/circuit breaker)	5531630	6146848	18-5815	18-5817	—
50 4 Cyl. (w/o circuit breaker)	6146849	& UP	18-5817	18-5815 ^①	—
50 4 Cyl. (w/circuit breaker)	6146849	& UP	18-5817	18-5817	—
50 3 Cyl.	6428681	B122929	18-5816	18-5817	—
50 3 Cyl.	B122930	C160935	18-5817	18-5817	—
50 3 Cyl.	C160936	D000749	18-5817	—	18-5729
50 3 Cyl.	D000750	G290584	18-5816	—	—
55 3 Cyl.	D000750	G290584	18-5816 ^⑤	—	—
55 3 Cyl.	G290585	G589999	18-5820	—	—
60 3 Cyl.	6428681	B122929	18-5816	18-5817	—
60 3 Cyl. (w/solenoids)	B122930	D000749	18-5817	18-5817	—
60 3 Cyl. (w/relays)	B122930	D000749	18-5817	—	18-5729
60 3 Cyl.	D000750	G290584	18-5816 ^⑤	—	—
60 3 Cyl.	G290585	G589999	18-5815	—	—
65 4 Cyl.	2446775	3293183	18-5836	—	—
65 3 Cyl.	3547987	4571651	18-5815	—	—
65 JET	G127500	& UP	18-5834	—	—
70 3 Cyl.	4571652	5579016	18-5815	—	—
70 3 Cyl.	5579017	6104369	18-5815	18-5815 ^①	—
70 3 Cyl.	6104370	6428680	18-5816	18-5815 ^①	—
70 3 Cyl.	A996147	& UP	18-5817	18-5817	—
75 4 Cyl.	6432901	& UP	18-5816	18-5817	—
75 3 Cyl.	D252461	G127499	18-5817	18-5819	—
75 3 Cyl.	G127500	G360002	18-5834	18-5819	—
75 3 Cyl.	G360003	& UP	18-5834	—	—
80	2559001	3493912	18-5836	—	—
80 4 Cyl.	4831999	5582561	18-5815	—	—
80 4 Cyl.	5582562	6030903	18-5815	18-5815 ^①	—
80 4 Cyl.	6030904	6432900	18-5816	18-5815 ^①	—
80 3 Cyl.	A996142	& UP	18-5817	18-5817	—
85 4 Cyl.	3493913	3865694	18-5836	—	—
85 4 Cyl.	3865695	4831998	18-5815	—	—
90	4845301	5299505	18-5815	18-5815	—
90	5299506	6026608	18-5815	18-5815 ^①	—
90	6026609	6436122	18-5816	18-5815 ^①	—
90	6436123	& UP	18-5816	18-5817	—
90 3 Cyl.	A996142	C221999	18-5817	18-5817	—
90 3 Cyl.	D252461	G127499	—	18-5819	—
90 3 Cyl.	G127500	G360002	18-5834	18-5819	—
90 3 Cyl.	G360003	& UP	18-5834	—	—
100 6 Cyl.	2318586	3253111	18-5836	—	—
100 4 Cyl.	B209468	D252460	18-5834	—	—
100 4 Cyl.	D252461	G359967	18-5834	18-5819	—
100 4 Cyl.	G359968	& UP	18-5834	—	—
110 6Cyl.	1870204	2314955	18-5834	—	—
115	2836019	4112634	18-5836	18-5836	—
115	4112635	4855152	18-5815	18-5836	—

① Use 18-5817 for applications with circuit breaker and fuse.

② For units with 8-32, 1/4-20 terminals.

③ For units with 10-32, 5/16-18 terminals.

④ Use 18-5818 if off white solenoid is needed.

⑤ For design II applications use 18-5820.

⑥ w/rubber bushing solenoid

SOLENOID APPLICATION (Cont.)

HP	Beg. S/N	End. S/N	Starter Solenoid	Power Trim Solenoid	Power Trim Relay
115	4855153	5600966	18-5815	18-5815	—
115	5600967	6051525	18-5815	18-5815 ①	—
115	6051526	6436122	18-5816	18-5815 ①	—
115	6436123	& UP	18-5816	18-5817	—
115 4 Cyl.	C100000	D252460	18-5834	—	—
115 4 Cyl.	D252461	& UP	18-5834	18-5819	—
125	2314956	3253111	18-5836	—	—
125 4 Cyl.	D283222	G359967	18-5834	18-5819	—
125 4 Cyl.	G359968	& UP	18-5834	—	—
135	2839369	3293233	18-5836	18-5836	—
V135	A904646	C100860	18-5815 ③	18-5817	—
V135	A904646	C100860	18-5817 ②	18-5817	—
V135	C100861	C239552	18-5815	18-5817	—
V135	C239553	D081999	18-5815 ④	18-5817	—
V135	D082000	G201874	18-5815	18-5819	—
V135 (w/rubber bushing solenoid)	D082000	G201874	18-5834	18-5819	—
V135 (w/rubber bushing solenoid)	G201875	& UP	18-5834	—	—
V135 DFI	G590000	& UP	18-5834	—	—
140	3293234	3502805	18-5836	18-5836	—
140	4865678	& UP	18-5815	18-5815	—
150	3502806	4121434	18-5836	18-5836	—
150	4121435	4865677	18-5815	18-5836	—
150 XS	4868648	5327662	18-5815	18-5815	—
V150	4868998	6042945	18-5815	18-5815	—
V150	6042946	A904645	18-5816	18-5817	—
V150	A904646	C100860	18-5815 ③	18-5817	—
V150	A904646	C100860	18-5817 ②	18-5817	—
V150	C100861	C239552	18-5815	18-5817	—
V150	C239553	D082999	18-5815 ④	18-5817	—
V150, 150 EFI	D082000	G201874	18-5815	18-5819	—
V150, 150EF	D082000	G201874	18-5834	18-5819	—
V150, 150 EFI	G201875	G303045	18-5815	—	—
V150, 150EFI	G201875	G303045	18-5834	—	—
V150, 150 EFI	G303046	& UP	18-5834	—	—
V150 DFI	G590000	& UP	18-5834	—	—
150 XR-4/Magnum II	B242885	D081999	18-5815	18-5817	—
150 XR-4/Magnum II	C239553	D081999	18-5815	18-5818 ⑥	—
150 XR-6/Magnum III	D082000	G201874	18-5815	18-5819	—
150 XR-6/Magnum III	D082000	G201874	18-5834	18-5819	—
150 XR-6/Magnum III	G201875	G303045	18-5815	—	—
150 XR-6/Magnum III	G201875	G303045	18-5834	—	—
150 XR-6/Magnum III	G303046	& UP	18-5834	—	—
V175	4301235	6618750	18-5815	18-5815	—
V175	6618751	C239552	18-5816 ②	18-5817	—
V175	6618751	C239552	18-5815 ③	18-5817	—
V175	C100861	C239552	18-5815	18-5817	—
V175	C239553	D081999	18-5815 ④	18-5817	—
V175, 175 EFI	D082000	G201874	18-5815	18-5819	—
V175, 175 EFI	D082000	G201874	18-5834	18-5819	—
V175, 175 EFI	G201875	G303045	18-5815	—	—
V175, 175 EFI	G201875	G303045	18-5834	—	—
V175, 175 EFI	G303046	& UP	18-5834	—	—
V175 DFI	G590000	& UP	18-5834	—	—
V200	4839034	6073191	18-5815	18-5815	—
V200	6073192	C100860	18-5816	18-5817	—
V200	C100861	C291519	18-5815	18-5817	—
V200 (2.5L)	C291520	D081999	18-5815 ④	18-5817	—
V200	D082000	& UP	18-5815	18-5819	—
V200, 200 EFI	D082000	G201874	18-5815	18-5819	—
V200, 200 EFI (w/rubber bushing solenoid)	D082000	G201874	18-5834	18-5819	—
V200, 200 EFI	G201875	G303045	18-5815	—	—
V200, 200 EFI (w/rubber bushing solenoid)	G201875	G303045	18-5834	—	—
V200, 200 EFI	G303046	& UP	18-5834	—	—
V200 DFI	G386496	& UP	18-5834	—	—
V220	B117316	UP	18-5815	18-5817	—
V225 2.4L	5628028	UP	18-5815	18-5815	—
V225 3.0L	D280813	G303045	18-5834	18-5819	—
V225 3.0L	G303046	& UP	18-5834	—	—
V225 DFI	G590000	& UP	18-5834	—	—
V225/250 EFI	G129222	& UP	18-5834	—	—
V250/275	C101891	& UP	18-5815	18-5817	—
3.4 Liter	5611648	& UP	18-5815	18-5817	—

① Use 18-5817 for applications with circuit breaker and fuse.

④ Use 18-5818 if off white solenoid is needed.

② For units with 8-32, 1/4-20 terminals.

⑤ For design II applications use 18-5820.

③ For units with 10-32, 5/16-18 terminals.

⑥ w/rubber bushing solenoid